






## CORNER SHELF - INSTALLATION INSTRUCTIONS

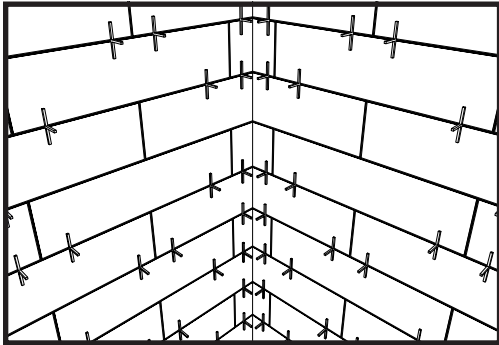


1. Begin by carefully installing the wall tiles with grout joints measuring 1/16" or wider. Make sure to clean the setting material from the joint area where the Corner Shelf will eventually be installed.

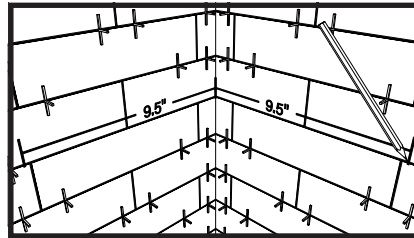

Measure and mark a distance of 9 1/2" from the inner corner on each wall. These marks will serve as reference points for proper placement.

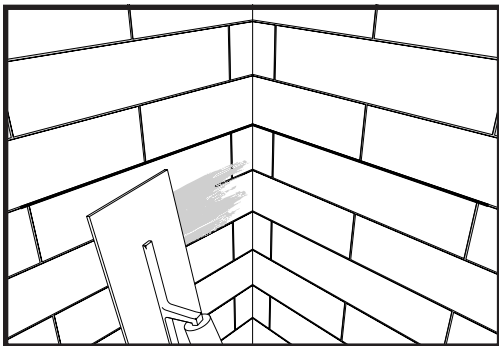


2. Apply grout between the tiles, ensuring that the marked area in the inner corner remains free of grout. This open area is for the shelf installation.

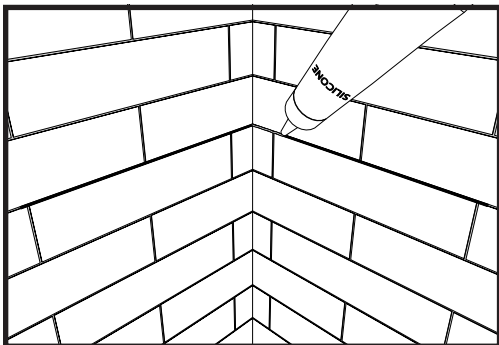

3. Once the grout has fully set, carefully fill the open joint area with silicone. Insert the Corner Shelf immediately after applying silicone.

This sealant will effectively prevent moisture and debris from accumulating in the gap.

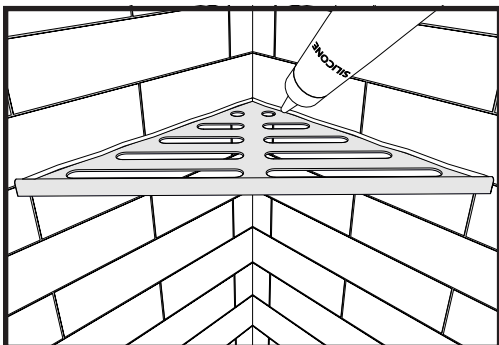

4. Using silicone, apply a thin, even layer to the joint between the top and bottom surfaces of the shelf and the adjacent wall tiles. This additional seal will enhance the shelf's stability and prevent moisture from infiltrating the joint.

**ALLOW THE APPLIED SEALANT TO CURE COMPLETELY BEFORE ADDING WEIGHT TO THE SHELF. THIS CURING PERIOD WILL ENSURE THE SEALANT'S EFFECTIVENESS AND DURABILITY AND WILL VARY BY MANUFACTURER.**

436 East 36th Street, Charlotte, NC 28205 | 800.232.6156 | [www.tileredi.com](http://www.tileredi.com) | [sales@tileredi.com](mailto:sales@tileredi.com)

Corner Shelf provided by Great Lakes Tile Products

Tile Redi® trademarks and logos are owned by and the Intellectual Property of Tile Redi, LLC.

©2023 Tile Redi, LLC. All Rights Reserved. PATENT: [www.TileRedi.com/PatentMarkings](http://www.TileRedi.com/PatentMarkings)